

SELF-DIAGNOSIS RESET PROCEDURE



1. Turn the engine stop switch to RUN and ignition switch OFF.
2. Short the service check connector of the PGM-FI system using a jumper wire.
3. Turn the ignition switch ON.
4. Remove the jumper wire from the service check connector.
5. The MIL lights about 5 seconds.
While the indicator lights, short the service check connector again with the jumper wire.
Self diagnosis memory data is erased, if the MIL turn off and start blinking.

- The service check connector must be jumped while the indicator lights. If not, the MIL will not start blinking.
- Note that the self diagnosis memory data cannot be erased if you turn off the ignition switch before the MIL starts blinking.

If the MIL blinks 20 times, the data has not been erased, so try again.

SERVICE CHECK CONNECTOR

JUMPER WIRE

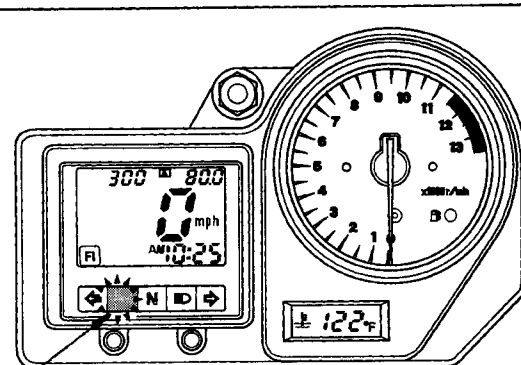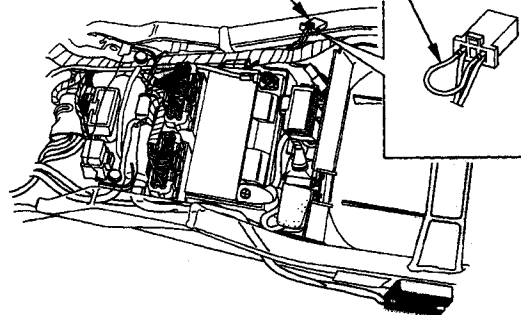

MALFUNCTION INDICATOR LAMP (MIL)